

Using the Multifunction Handle

1. Turn on the Multifunction Handle




a. To turn on the Multifunction Handle, press the power [⏻] button, and the screen will turn on. If there is no probe attached, four dots will appear on the screen, indicating there is no measurement value.



b. To turn off the multifunction handle, press and hold the power [⏻] button until the display turns blank.


2. Pair the Multifunction Handle with the Tablet

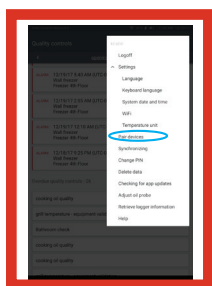

a. To pair the multifunction handle with the tablet, select "Pair devices" from the menu on the top right corner of the tablet screen.



b. Follow the steps as prompted by the tablet. Select "multifunction handle" as the device to be paired.

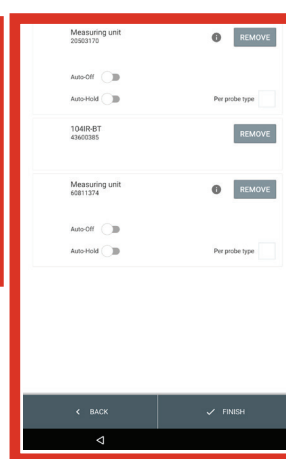

c. Auto-Hold: When enabled, this setting will show the words "Auto-Hold" when the measurement is stable.

d. Auto Off: When enabled, Auto-Off will turn off the multifunction handle after 10 minutes of inactivity.


3. Probe Attachments



Penetration Temperature Probe:
Used to measure internal product temperatures.




Cooking Oil Probe:
Used to measure the quality (%TPM) and temperature of cooking oil.



Surface Temperature Probe:
Used to measure the surface temperature of grills.



Air Temperature Probe:
Used to measure air temperature in applications like refrigeration units.

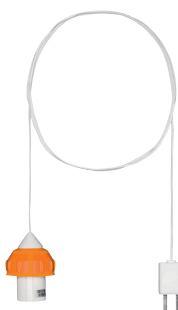

TC Adapter Type K Probe:
Used for equipment validation.

Using the Multifunction Handle (cont.)

4. Changing the Probes



a. To change the probe, twist the orange probe base counter clockwise until the attached probe releases.



b. Once the probe is separated from the handle, select the desired probe and align the divots in the probe's base with the those on the inside of the handle.



c. Lock in the new probe by turning the orange probe base clockwise until tight.

5. Take and Send Measurements



a. Perform the required measurement. Refer to temperature measurement training card for more information on taking measurements. Clean probe attachment before and after use.



b. Once the measurement has been taken, press the transfer button [↑] on the multifunction handle. When the measurement is transferred, the value will appear on the tablet screen.